EN

QUICK INSTALLATION GUIDE


SMILE-G3-S5-INV / SMILE-G3-B5-INV

412-XXXXX-00

1. Product Overview

(1) Grid Connector
(2) Backup Connector
(3) BAT+ Connector
(4) BAT− Connector
(5) Battery Circuit Breaker
(6) PV Connectors*
(7) PV Switch*
(8) Wi-Fi Port
(9) Communication Ports
(10) LED Display
(11) Grounding Points

*** Only for SMILE-G3-S5-INV**

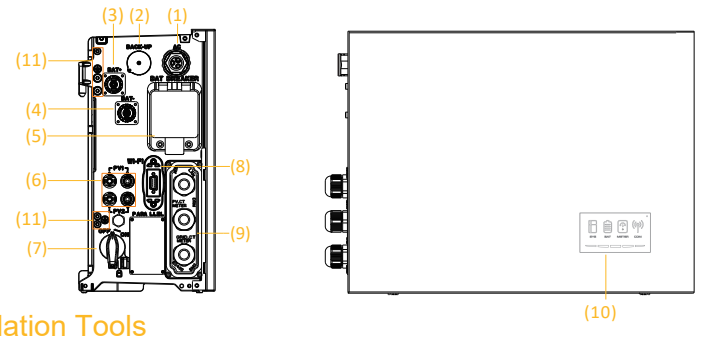

2. Accessories and Installation Tools

2.1 Scope of Delivery

Inverter (×1)	Top Cover (×1)	Right Cover (×1)	Cable Cover (×1)	Left Supporting Foot (×1)	Right Supporting Foot (×1)	a PV+ Connectors (×2)	a PV- Connectors (×2)
Grid Plug Connector (×1)	Backup Plug Connector (×1)	Wi-Fi Dongle (×1)	6 Pin AUX Terminal Block (×1)	Parallel Battery Positive Power Cable (×1)	Parallel Battery Negative Power Cable (×1)	Grid CT (×1)	PV CT (×1)
Y Type Terminals (×5)	Grounding Cable between Inverter and 1st Battery (×1)	M5 Screws (×9)	PV Connector Disassembling Tool (×1)	BAT Connector Disassembling Tool (×1)	Documentation (×4)	a : Not included in SMILE-G3-B5-INV	

2.2 (Optional) Accessories for Wall Mounting

Wall Bracket (×1)	a Support plate for Cable Cover (×1)	Locating Stud for Cable Cover (×1)	Locating Screw for Side Cover (×1)	Wall Anchor (×6)	Screw M5×12 (×10)	b Screw M5×10 (×3)
Screw M3×10 (×2)	Flange Nut M5 (×5)	b Left Connector for BAT Wall Bracket (×1)	b Right Connector for BAT Wall Bracket (×1)	BAT Positive Power Cable (×1)	BAT Negative Power Cable (×1)	BAT Communication Cable (×1)

a: Only suitable for inverter wall mounting.
b: Used to connect between the wall bracket of inverter and the wall bracket of the first battery.


2.3 Installation Tools

T20x150 mm T20 Screwdriver	Spirit Level	Blade Width: 1.2&2.5 mm Flat-head Screwdriver	SW8 Socket Wrench	Wire Stripper	Network Plug Clamp
Terminal Crimpler	Crimping Pliers	Measuring Tape	Hammer Drill, bit Ø10	Multimeter	Current Clamp


3. Installing the Inverter

3.1 Installing the Inverter Standing on the Battery

Before installing the inverter, please ensure that the battery has been installed properly.

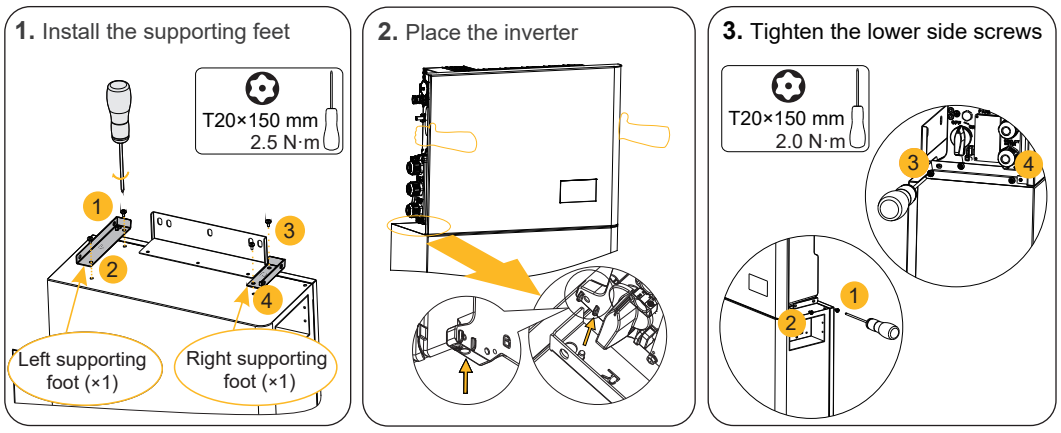

3.2 (Optional) Installing the Inverter with Wall Bracket

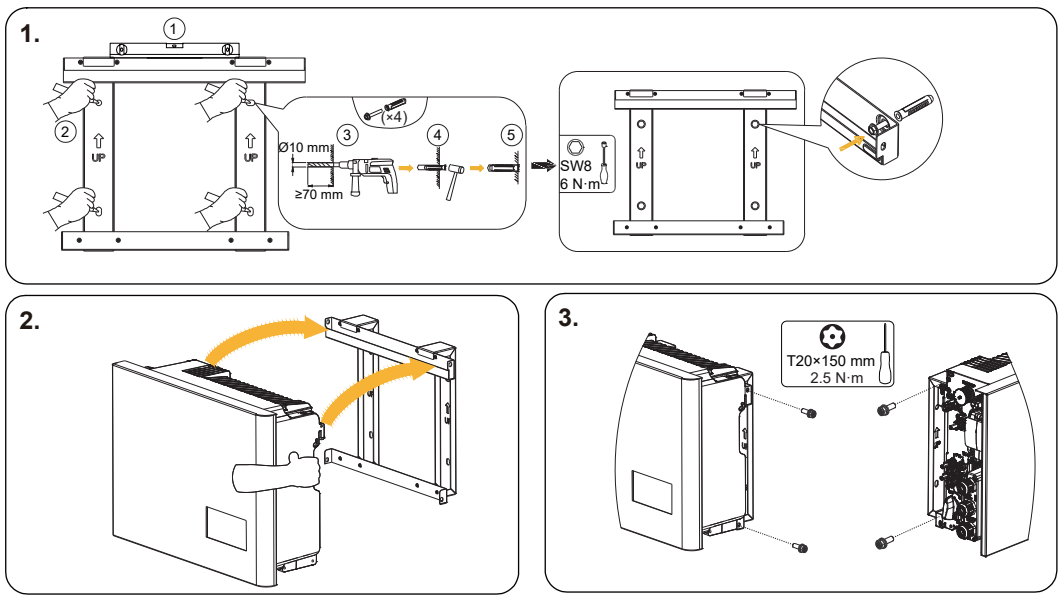

4. Electrical Connection


WARNING

Before doing electrical connection, please ensure the PV switch & AC and BAT circuit breakers are switched off and cannot be reactivated. reactivaed. switched off and cannot be reactivated.

DANGER

You must protect each inverter with an individual AC circuit breaker for grid side and backup side in order to ensure that the inverter can be disconnected safely.

4.1 Grounding Connection

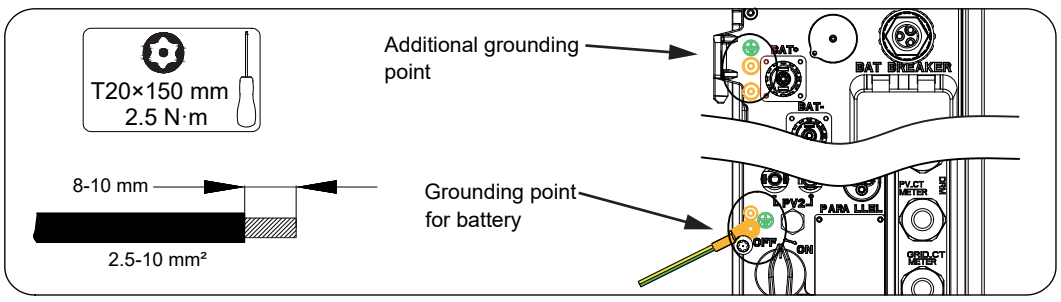

4.2 AC Connection

WARNING


For SMILE-G3-S5/B5-INV, the maximum allowable grid circuit breaker specification is 50 A. At the same time, the copper conductor cross section for grid connection must be 10 mm².
If the rated current of the AC circuit breaker selected is less than the maximum current of the inverter, please set its allowable maximum current through the AlphaESS App or AlphaCloud. Otherwise, it will increase the danger of the circuit breaker tripping under normal operating conditions.

AC connection recommendation for SMILE-G3-S5/B5-INV


Description	Max. current	AC circuit breaker type	Recommended cable section
Grid side	43.5 A	50 A	10 mm²
Backup side	35 A	50 A**	6 mm²


*Based on the voltage of 230 V.
**You can choose a smaller-sized miniature circuit breaker (MCB) based on the actual backup load power.

4.2.1 Grid Connection

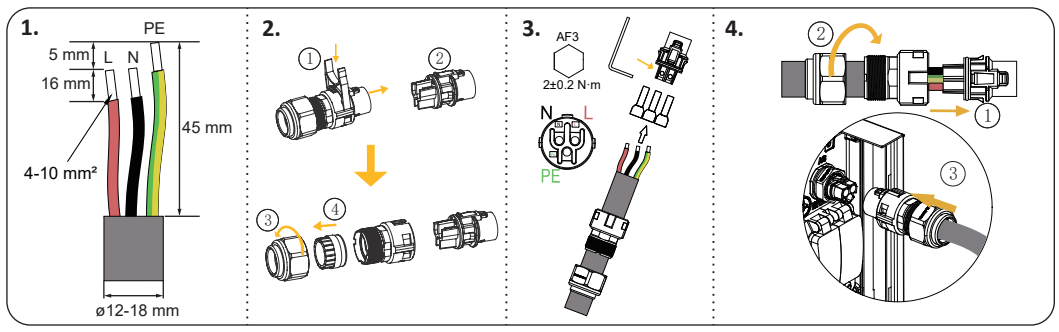



4.2.2 Backup Connection

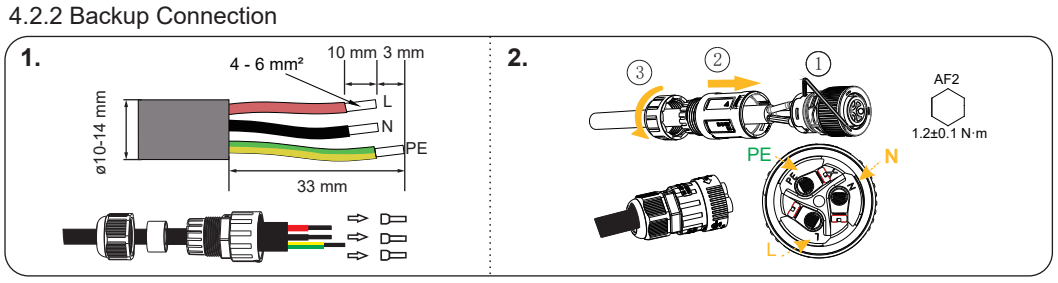

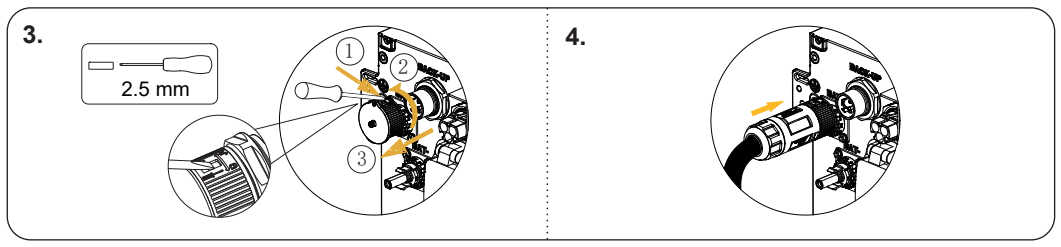


4.2.3 Grid/Backup Disconnection

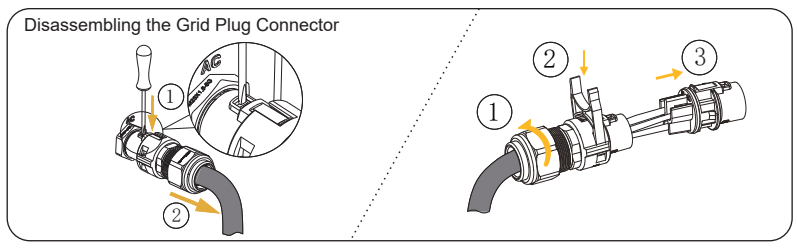

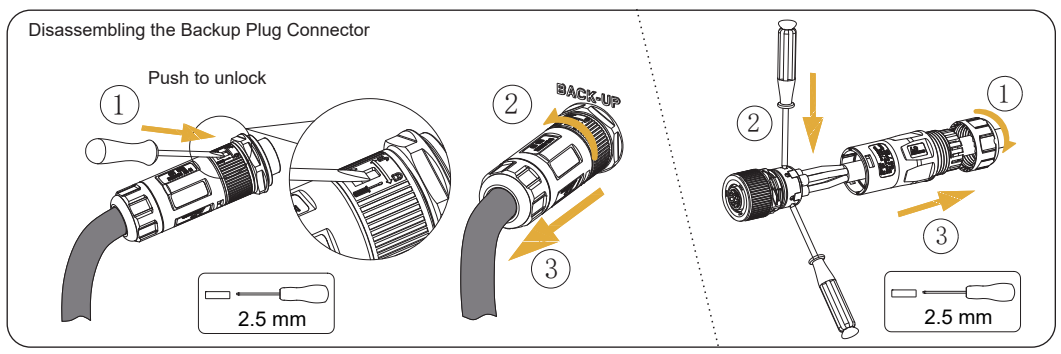

4.3 PV Connection

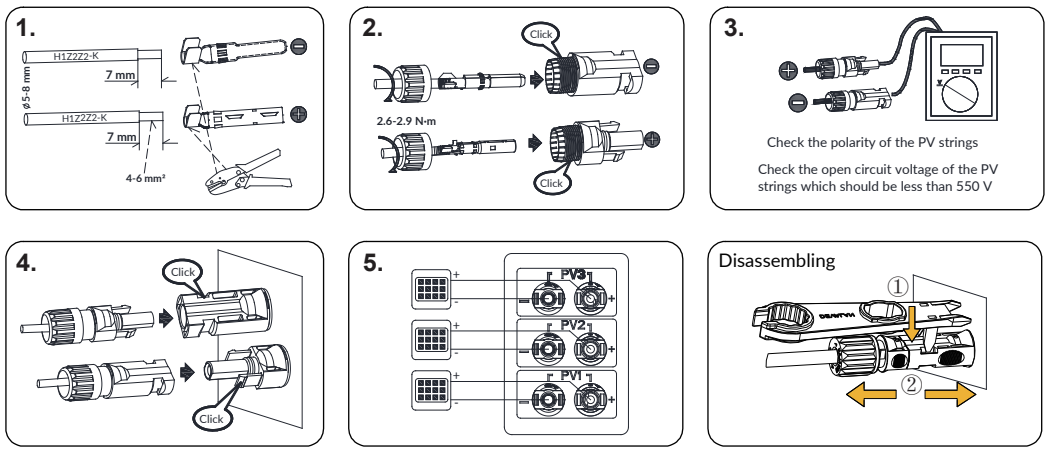


4.4 Connecting the Battery to the Inverter


DANGER

Danger to life due to burns caused by electric arcs through short-circuit currents.
Short-circuit currents in the battery can cause heat build-up and electric arcs. Heat build-up and electric arcs may result in lethal injuries due to burns.


- Disconnect the battery from all voltages sources prior to performing any work on the battery.
- Disconnect the inverter from all voltages sources prior to performing any work on the inverter.
- DO NOT short-circuit the battery terminals. First, complete the main negtive terminal connection between battery and inverter, and then complete the main positive terminal connection between battery and inverter.
- Observe the battery safety information provided in the Installation & Operation & Maintenance Manual.

BAT connection for inverter and series battery

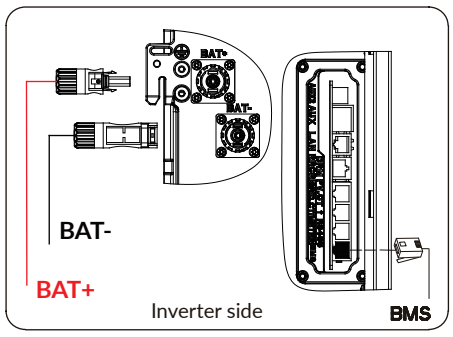

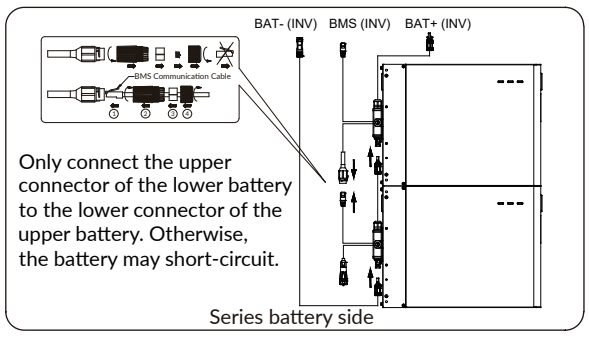


BAT connection for inverter and parallel battery

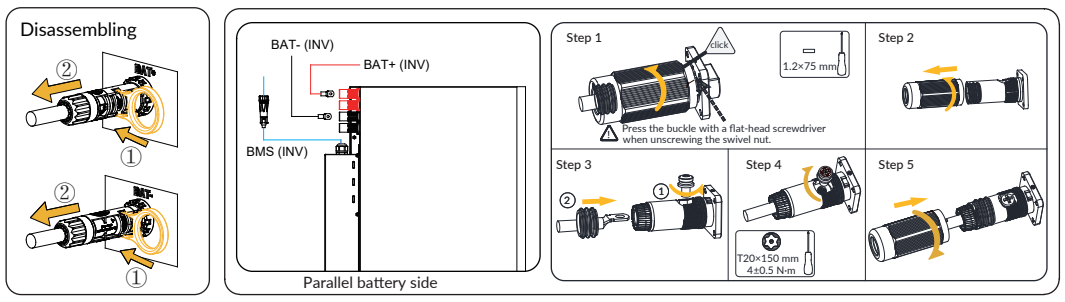


5. Communication Connection

5.1 Wi-Fi Connection

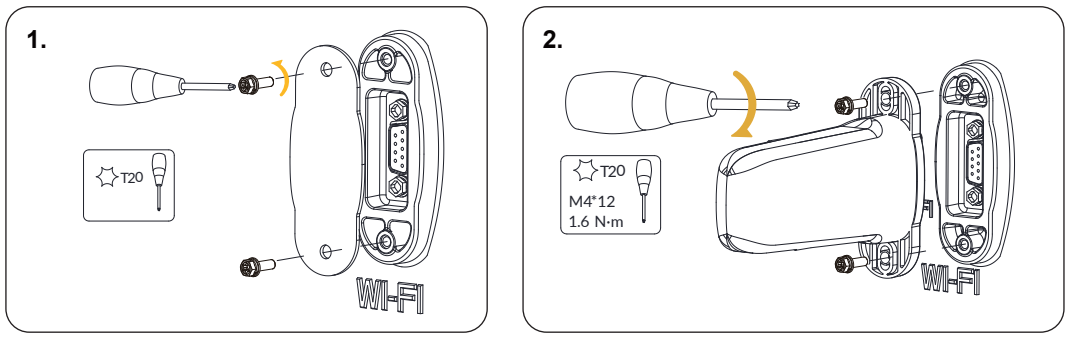



5.2 Communication Connection

AUX / LAN / DRM&RRCR / PV-CT / GRID-CT&Meter / RS485 / BMS Connection Ports

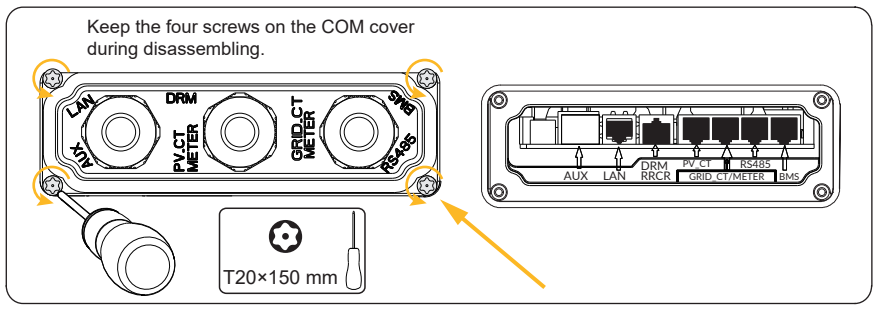


Item \ No.	1	2	3	4	5	6	7	8
BMS	NC	RS485_A4	NC	CAN1_H	CAN1_L	NC	RS485_B4	NC
RS485	12 V	NC	GND	RS485_B5	RS485_A5	NC	NC	NC
GRID_CT/METER	GRID_CT-	GRID_CT+	RS485_A7	12V	GND	RS485_B7	NC	NC
PV_CT	PV_CT-	PV_CT+	RS485_A7	NC	NC	RS485_B7	NC	NC
RRCR	K1	K2	K3	K4	5 V	NC		
DRM	DRED1/5	DRED2/6	DRED3/7	DRED4/8	REFGEN/0	COMLOAD/0	GND	
AUX	DO1_NO	DO1_COM	DO1_NC	DI_NEGATIVE	DI_POSITIVE	GND		

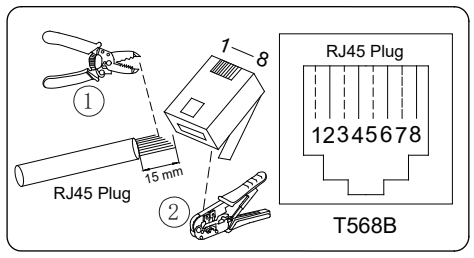


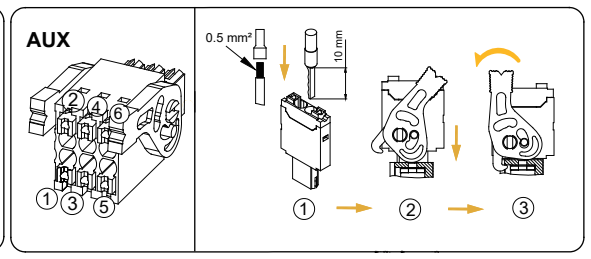

5.3 Wiring the Communication Cables between the Inverter and Battery

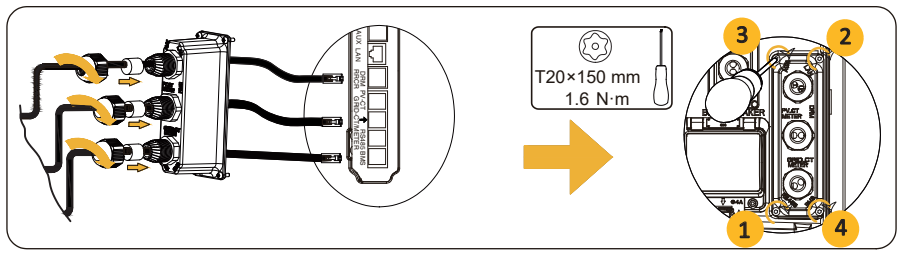

5.4 CT Wiring (Optional)

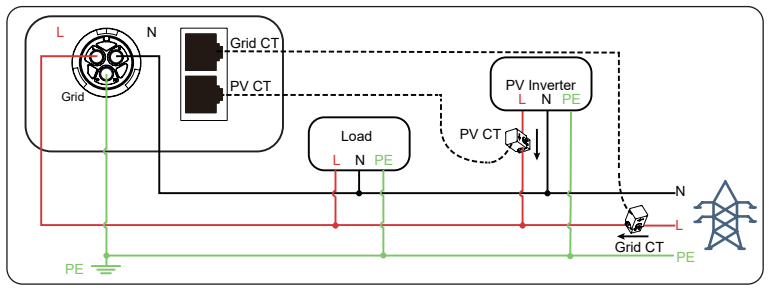

6. Commissioning

WARNING

Never power on the energy storage system without the correct and reliable installation and electrical connection.

Please scan the QR code and follow the steps to complete the commissioning via Partner APP.

Partner APP commissioning guide

7. Power ON / OFF the Energy Storage System Procedure

Procedure for Powering ON the System

1) Switch on the battery circuit breaker of the inverter, directly below the AC connector.
2) Switch on the battery circuit breakers of all batteries.
3) For series batteries, please skip this step.
   For parallel batteries, shortly press the battery power buttons. If more than one parallel battery is installed, please shortly press all power buttons within 30 seconds.
4) Switch on the AC circuit breaker between the grid port of the inverter and the grid.
5) Switch on the AC circuit breaker between the backup port of the inverter and the loads.
6) Switch on the PV switch (if there is any) between the PV strings and the inverter.
7) Switch on the PV switch (if there is any) at the lower left of the inverter.
8) Switch on the AC circuit breaker (if there is any) between the PV-inverter and the grid.


Procedure for Powering Off the System

1) Switch off the AC circuit breaker between the inverter and the loads.
2) Switch off the AC circuit breaker (if there is any) between the PV-inverter and the grid.
3) Switch off the AC circuit breaker between the inverter and the grid.
4) Switch off the PV switch (if there is any) between the PV strings and the inverter.
5) Switch off the PV switch (if there is any) at the lower left of the inverter.
6) For series batteries, please skip this step.
   For parallel batteries, press and hold the power button of each parallel battery for 6 seconds.
7) Switch off the battery circuit breakers of the batteries.
8) Switch off the battery circuit breaker of the inverter, directly below the AC connector.


8. Mounting the Covers

Make sure all the wiring has been done and the energy storage system is working normally, then mount the covers of the inverter.


8.1 Mounting the Top Cover

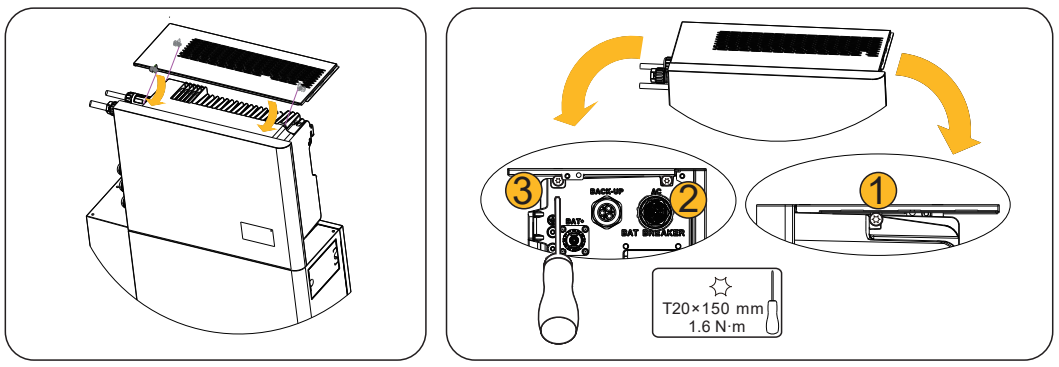


8.2 Mounting the Right Side Cover (If you don't have a wall bracket, please skip step 1.)

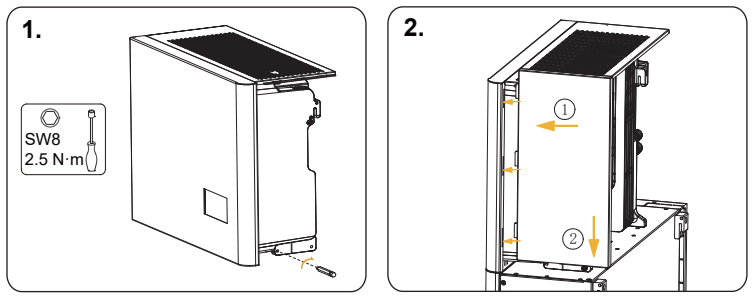

8.3 Mounting the Cable Cover (If you don't have a wall bracket, please skip steps 1 to 3.)

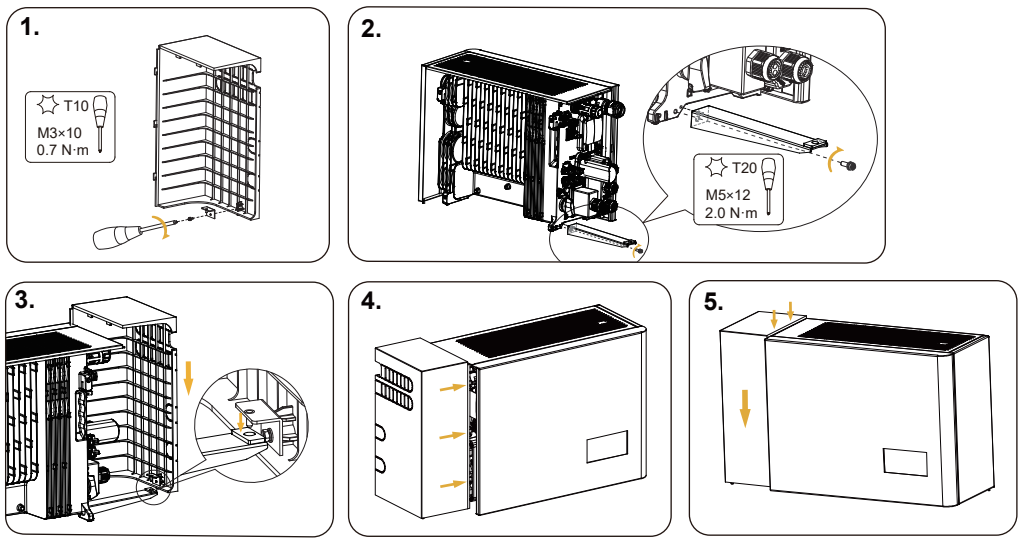

8.4 Disassembling the Cable Cover

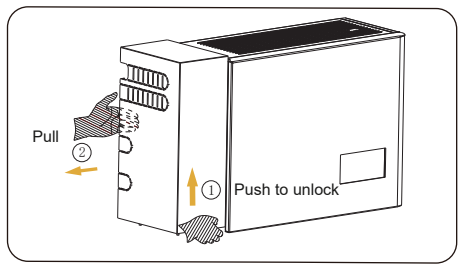

For more information, please download the user manual and other technical documents.

System Installation Manual | App Manual (Installer) | AlphaCloud Manual (Installer) | App Manual (End User) | AlphaCloud Manual (End User) | System Datasheet